

SONY

KP-53S25

MODEL

OPERATING MANUAL

## SECTION 2 DISASSEMBLY

### Getting Started

### Welcome!

Thank you for purchasing the Sony Color Rear Video Projection TV. Here are some of the features you will enjoy with your projection TV:

- **AUTO SET UP** feature that allows you to set up your projection TV easily by pressing the SET UP button
- On screen menus that let you set the picture quality, sound, and other settings
- Picture-in-Picture that allows you to watch another TV channel, video or cable image as a window picture
- On/off timer that allows you to make the TV program of your choice be displayed on the screen for a specified duration
- Dynamic Focus circuitry that automatically focuses the scanning electron beam for enhanced sharpness, especially at the corners
- Universal remote commander supplied that allows you to operate Sony and other manufacturers' video equipment

### About this manual

The instructions in this manual are for models KP-41T25, KP-46S17 and KP-53S17. Before you start reading this manual, please check your model number, located at the rear of the projection TV. Model KP-46S17 is used for illustration purposes in this manual. Model KP-41T25 incorporates two tuners that enable you to operate PIP feature without connecting a VCR. Models KP-46S17 and KP-53S17 incorporate one tuner. These models must be connected to a VCR to enjoy PIP. The differences in specifications are indicated in the text.

Instructions in this manual are based on use of the remote commander. You can also use the controls on the projection TV if they have the same name as those on the remote commander.

### Precautions

This projection TV operates on extremely high voltage. To prevent fire or electric shock, please follow the precautions below.

#### Safety

- Operate the projection TV only on 120 V AC.
- One blade of the plug is wider than the other for safety purposes and will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- Should any liquid or solid object fall into the cabinet, unplug the projection TV and have it checked by qualified personnel before operating it further.
- Unplug the projection TV from the wall outlet if you are not going to use it for several days or more. To disconnect the cord, pull it out by the plug. Never pull the cord itself.

For details concerning safety precautions, see the supplied leaflet "IMPORTANT SAFEGUARDS."

#### Note on cleaning

Clean the cabinet of the projection TV with a dry soft cloth. To remove dust from the screen, wipe it gently with a soft cloth using vertical strokes only. Stubborn stains may be removed with a cloth slightly dampened with solution of mild soap and warm water. Never use strong solvents such as thinner or benzine for cleaning. If the picture becomes dark after using the projection TV for a long period of time, it may be necessary to clean the inside of the projection TV. Consult qualified service personnel.


#### Installing

- To prevent internal heat build-up, do not block the ventilation openings.
- Do not install the projection TV in a hot or humid place, or in a place subject to excessive dust or mechanical vibration.
- Avoid operating the projection TV at temperatures below 5°C (41°F).
- If the projection TV is transported directly from a cold to a warm location, or if the room temperature has changed suddenly, the picture may be blurred or show poor color. This is because moisture has condensed on the mirror or lenses inside. If this happens, let the moisture evaporate before using the projection TV.
- To obtain the best picture, do not expose the screen to direct illumination or direct sunlight. It is recommended to use spot lighting directed down from the ceiling or to cover the windows that face the screen with opaque drapery. It is desirable to install the projection TV in a room where the floor and walls are not of reflecting material. If necessary, cover them with dark carpeting or wall paper.


### Step 1: Installing the projection TV

For the best picture quality, install the projection TV within the areas shown below.

#### Optimum viewing area (Horizontal)

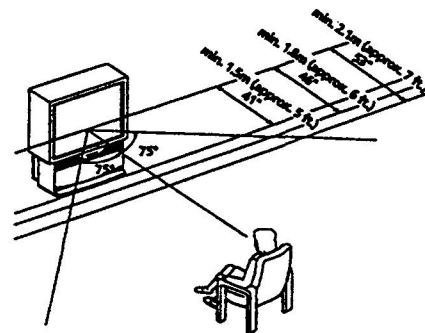


#### Optimum viewing area (Vertical)

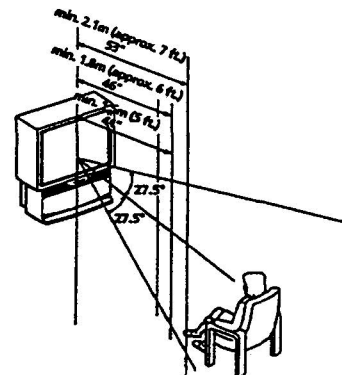

### Carrying your projection TV

Be sure to grasp the portions indicated when carrying the projection TV, and to use more than two people.

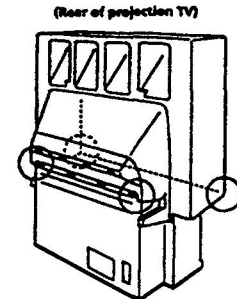

### Preparing for your projection TV

Before you use your projection TV, adjust convergence. For the procedure, see "Step 4: Setting up the projection TV automatically (AUTO SET UP)" on page 18.

## Step 2: Connections

### To an antenna

Connect your antenna cable to the VHF/UHF antenna terminal. If you cannot connect your antenna cable directly to the terminal, follow one of the instructions below depending on your cable type.

**Connect your antenna cable to the VHF/UHF antenna terminal. If you cannot connect your antenna cable directly to the terminal, follow one of the instructions below depending on your cable type.**

- A**
- VHF only
  - VHF/UHF
  - UHF only
  - Cable
- 75-ohm coaxial cable
- (Rear of projection TV)  
VHF/UHF
- B**
- VHF only
  - UHF only
  - VHF/UHF
- 300-ohm twin lead cable
- (Rear of projection TV)  
VHF/UHF
- Antenna connector
- C**
- VHF
- 75-ohm coaxial cable
- and
- UHF
- (Rear of projection TV)  
VHF/UHF
- EAC-45 U/V mixer  
(not supplied)
- 300-ohm twin lead cable


**Notes**  
Most VHF/UHF combination antennas have a signal splitter. Remove the splitter before attaching the appropriate connector. If you use the U/V mixer, snow and noise may appear in the picture when viewing cable TV channels over 37(W+1).

## Connecting an antenna/cable TV system without a VCR


**To cable or antenna**

Cable

(Rear of projection TV)  
VHF/UHF




**To cable box**  
If your cable company requires you to connect a cable box, make the connection as follows:

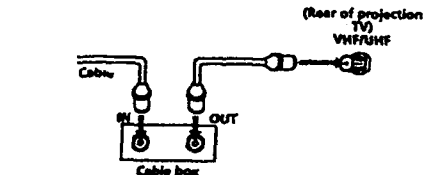

to cable box and cable (KP-41T25 only)

Diagram illustrating the connection of a cable box to a projection TV (KP-41T25 only). The cable box is connected to the TV via a 75-ohm coaxial cable (not supplied). The TV is labeled "Rear of projection TV" and "AUX TO CONVERTER". The cable is labeled "CATV cable" and "VHF/UHF".

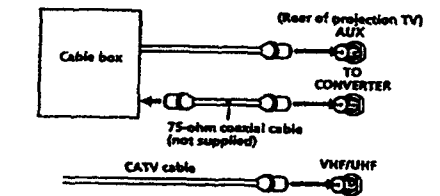


Some cable TV systems use scrambled or encoded signals requiring the cable box\* in addition to the normal cable connection.  
The cable box will be supplied by the cable company.

You cannot watch the signal through AUX connector as a window picture.

**cable and antenna (KP-41T25 only)**

(Rear of projection TV)  
AUX  
TO  
CONVERTER  
VHF/UHF

The diagram illustrates the connection of external cables to the rear of a projection TV. It shows two horizontal cable lines. The top line is labeled 'CATV cable' and has a connector that fits into a port labeled 'AUX'. The bottom line is labeled 'Antenna cable' and has a connector that fits into a port labeled 'VHF/UHF'. To the right of the 'AUX' port, there is a label 'TO CONVERTER' with an arrow pointing downwards to a small rectangular box representing a converter.

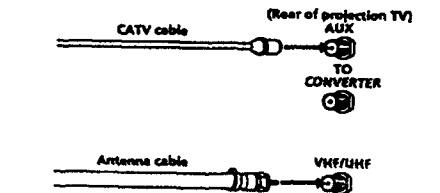

Do not connect anything to the TO CONVERTER connector in this case.

### Connecting an antenna/cable TV system with a VCR

For details on connection, see the instruction manual of your VCR. For KP-46S17/53S17, a VCR must be connected to your TV to watch two TV channels at one time (PIP feature).

Before connecting, disconnect the AC power cords of the equipment to be connected.


- Watch two TV programs at one time using a window picture (Picture-in-Picture)

**To a conventional VCR**


**Without a cable box**

**Without a cable box**

■ KP-41725

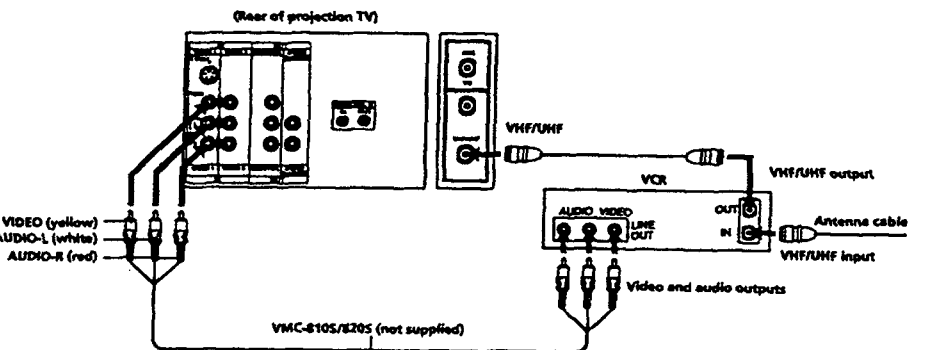

**KP-46517153517**  
 (Rear of emission TV)

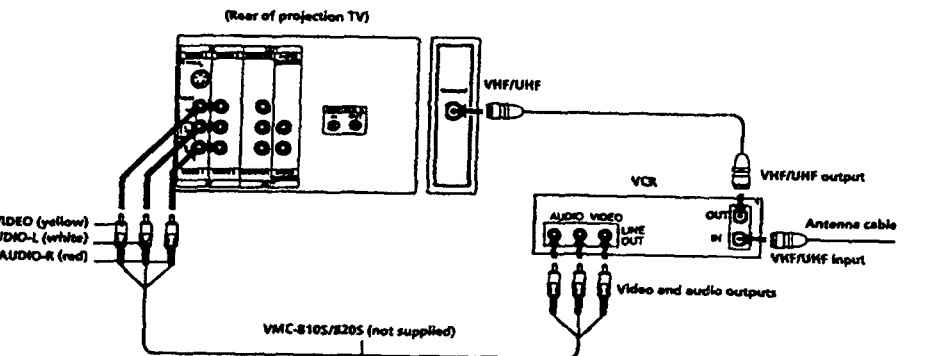


- Do not connect the cable to the S VIDEO connector on the projection TV.


- Do not connect the cable to the S VIDEO connector on the projection TV.

## With a cable box

### ■ KP-41T25

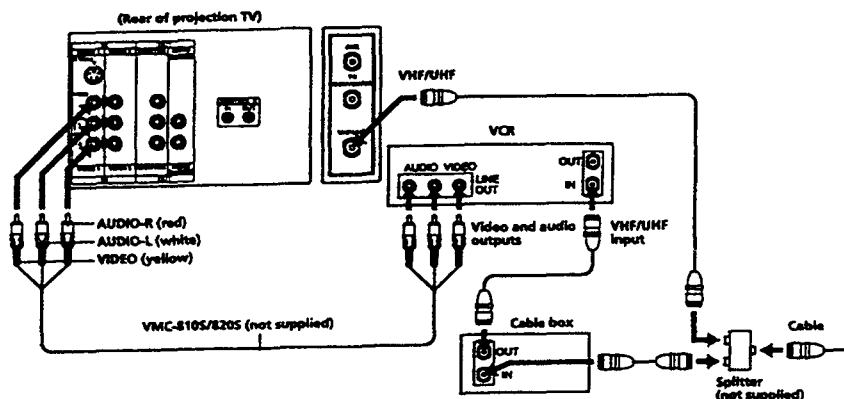

### ■ KP-46S17/53S17

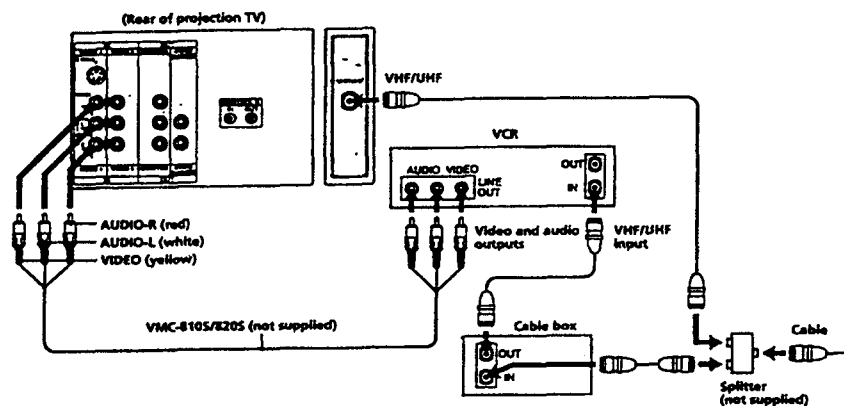


## To an S video equipped VCR

If your VCR has an S video output jack, make the connection as follows.


Whenever you connect the cable to the S VIDEO connector, the projection TV automatically receives S video signals.

## Without a cable box

### ■ KP-41T25

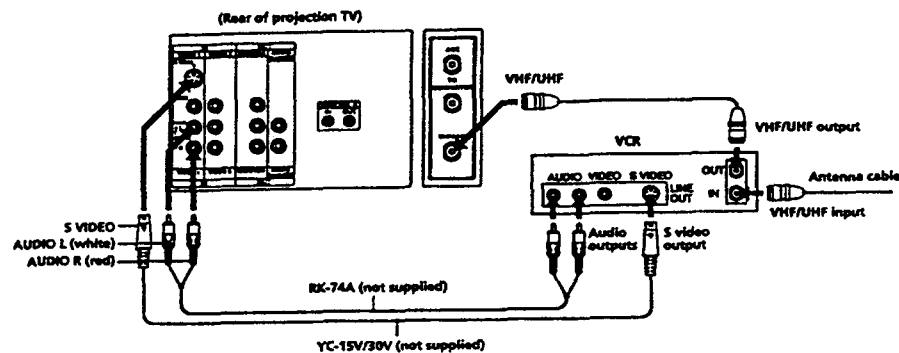


### ■ KP-46S17/53S17

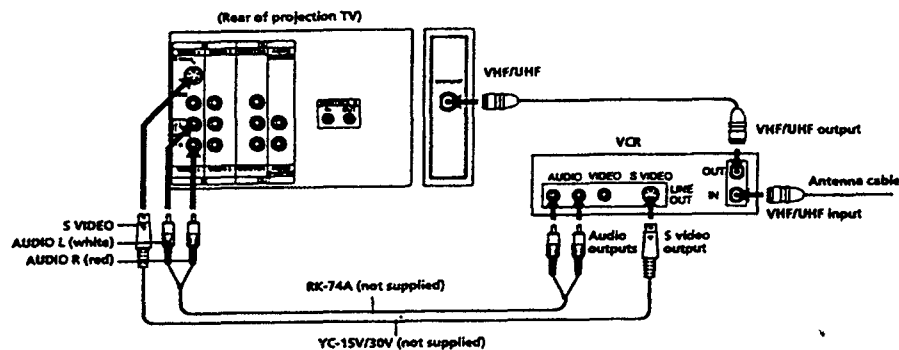


## Note

- Video signals are composed of Y (luminance) and C (chroma) signals. The S connection sends the two signals separately preventing degradation, and gives better picture quality compared to conventional connection.

■ KP-41T25

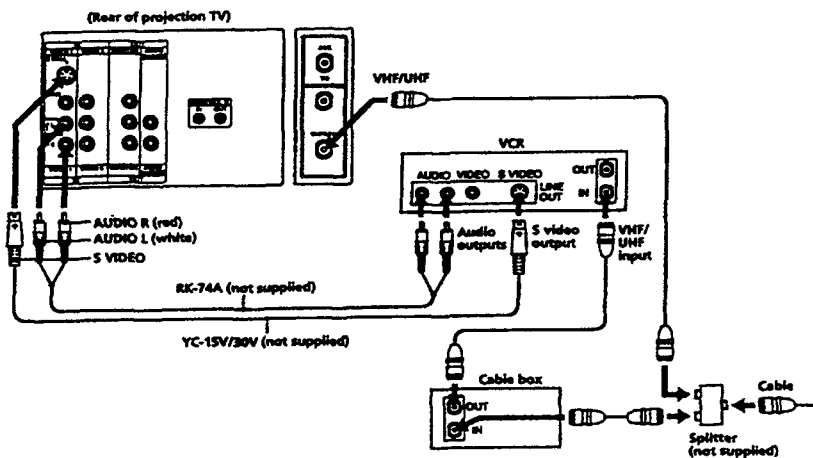


■ KP-46517/53517

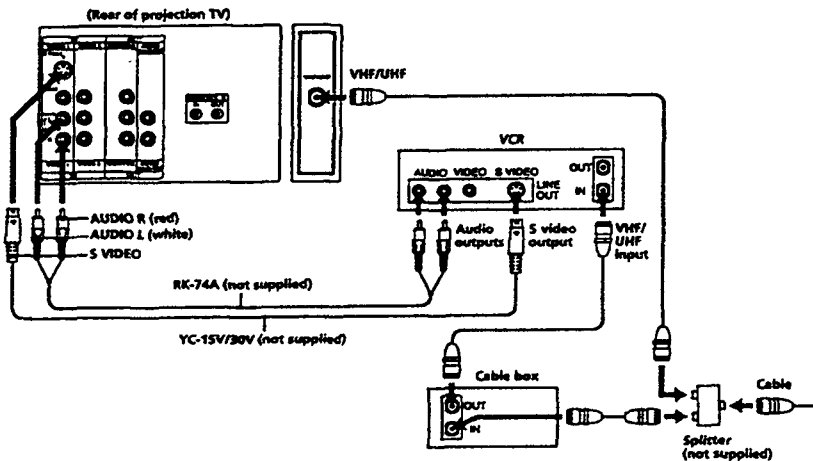


For connection details, see the instruction manual of the DBS (Digital Broadcasting Satellites) receiver.

## To a TV



**■ KP-41725**

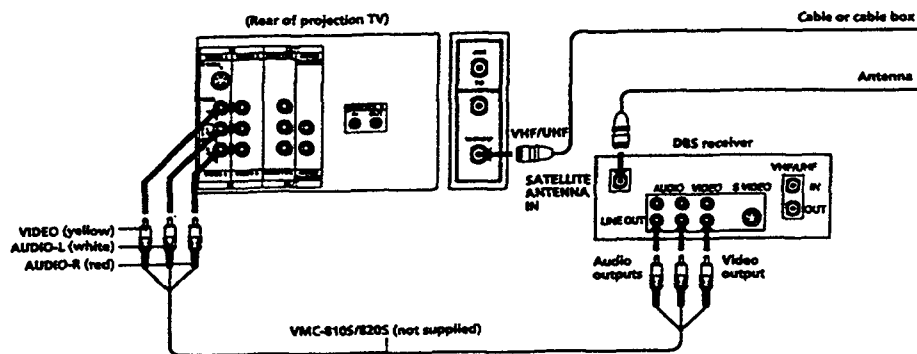

**■ KP-46517/53517**

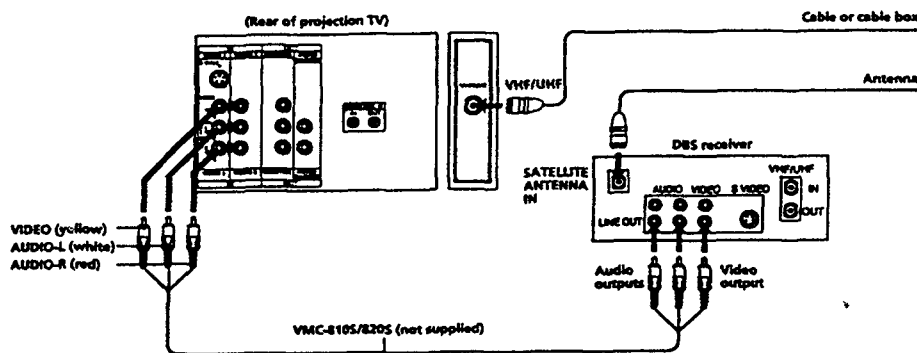


- You can use the S VIDEO jack or the composite video jack for video connection.

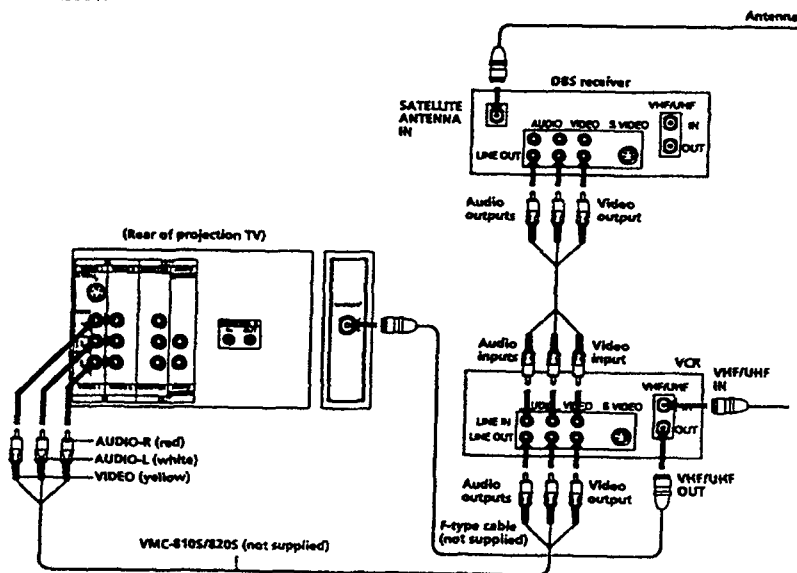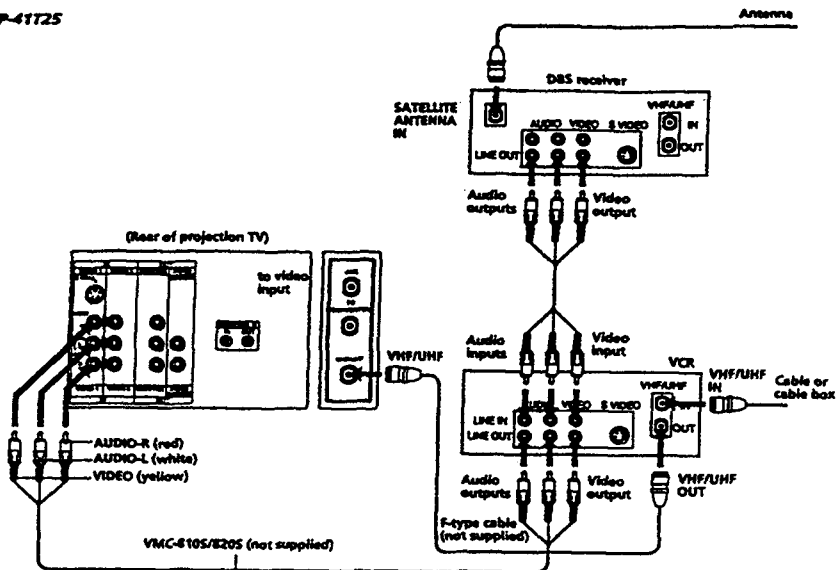

## Connecting a camcorder

This connection is convenient for watching the picture from a camcorder.

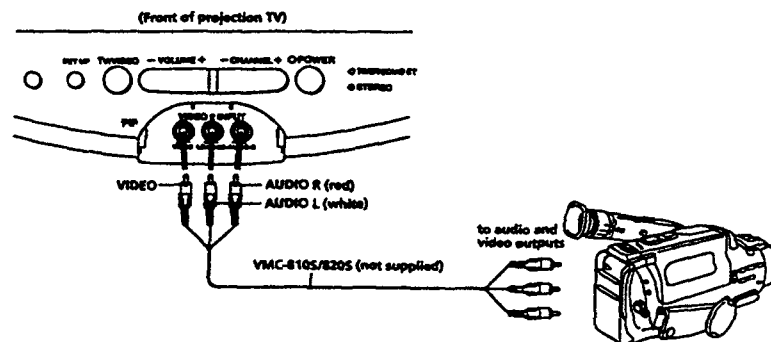


### Note

- To connect a monaural camcorder, connect the audio output of the camcorder to AUDIO L (MONO) of VIDEO 2 INPUT on the projection TV.


## Connecting two VCRs for tape editing

You can record input images displayed on the screen. This type of connection should be used only when you connect from the line input of one VCR, and from the line output of a second VCR.

### ■ KP-41T25

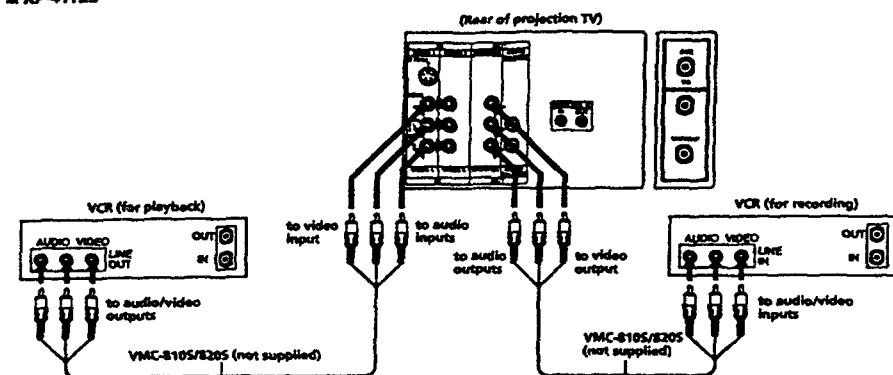

### ■ KP-46S17/53S17

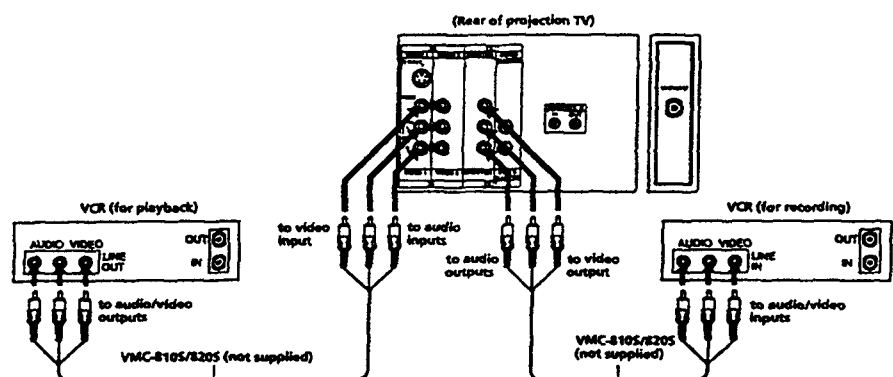


#### Notes

Do not change the input signal while editing, or the output signal will also change.  
When connecting a single VCR to the projection TV, do not connect MONITOR OUT to the VCR's line input, while at the same time connecting from the projection TV's VIDEO IN jacks to the VCR's line output.  
You can use the S video connector to connect a VCR for playback and the composite video jack to connect a VCR for recording.


## Connecting an audio system

When connecting audio equipment, see page 31 for more information.

### ■ KP-41T25

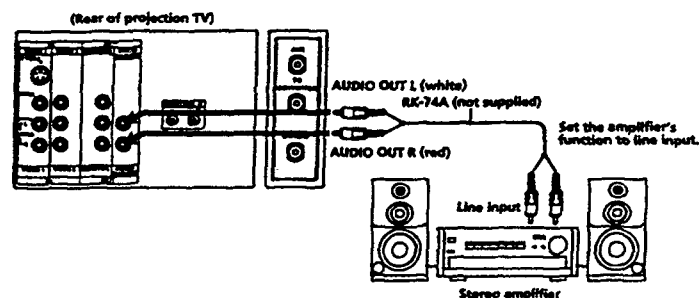

### ■ KP-46S17/53S17

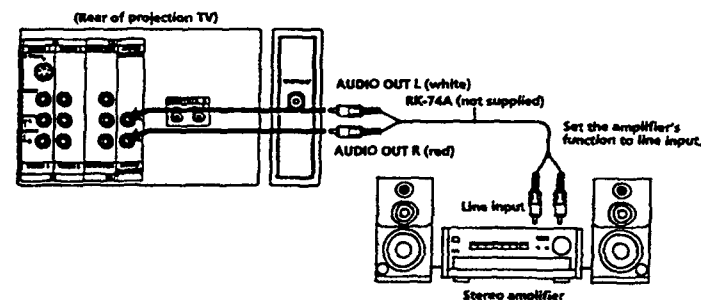

#### Note


- You can adjust the bass, treble and balance, or select surround or an MTS (Multichannel TV Sound) mode with the supplied remote commander.

## Connecting other Sony equipment with CONTROL S jack


This feature allows you to control your projection TV and other Sony equipment with one remote commander.

- To control other Sony equipment with the projection TV's remote commander, connect the input of the equipment to CONTROL S OUT jack on the projection TV.
- To control the projection TV with the remote commander of other Sony equipment, connect the output of the equipment to CONTROL S IN jack on the projection TV.

### ■ KP-41T25

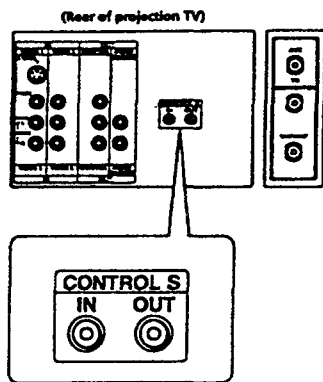


### ■ KP-46S17/53S17

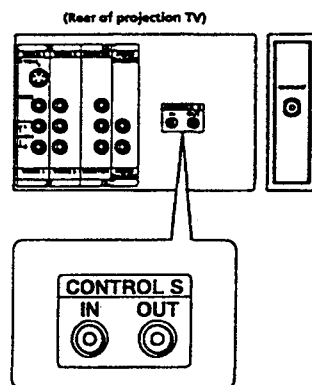

## Step 3: Setting up the remote commander

Insert one size AA (R6) battery (supplied) by matching the + and - on the battery to the diagram inside the battery compartment.

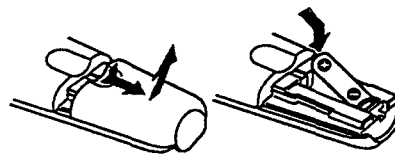


### Notes

- With normal use, the battery should last for approximately six months.
- If you do not use the remote commander for an extended period of time, remove the battery to avoid possible damage from battery leakage.
- Do not handle the remote commander roughly. Do not drop it, step on it or let it get wet.
- Do not place the remote commander in direct sunlight, near a heater, or where the humidity is high.


## Using the remote commander

The upper half of the remote commander has three selectable operation modes. Each button in this area has three different functions. You can select the mode by sliding a selector on the left side.


### For normal TV viewing

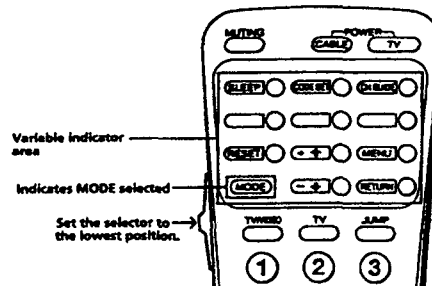

### For operating video equipment

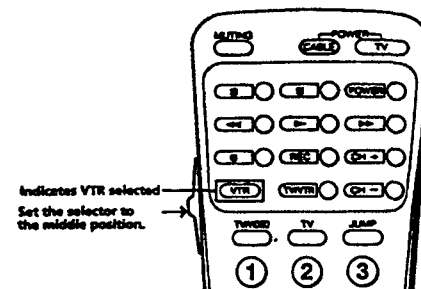


### For using the Picture-in-Picture feature

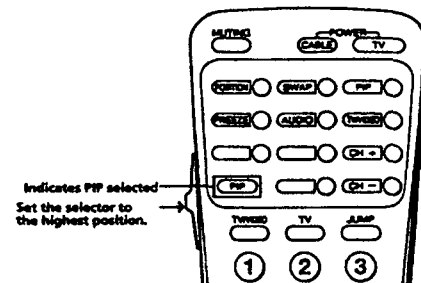



## Step 4: Setting up the projection TV automatically (AUTO SET UP)


You can set up your projection TV easily by using AUTO SET UP feature. It presets all the receivable channels, adjusts the convergence and changes the on-screen menu language. To set up the projection TV manually, see "Presetting channels" (page 22), "Setting cable TV on or off" (page 21), "Adjusting convergence" (page 20) and "Changing the menu language" (page 22). If the projection TV is set to a video input, you cannot execute AUTO SET UP. Press TV/VIDEO so that a channel number appears.

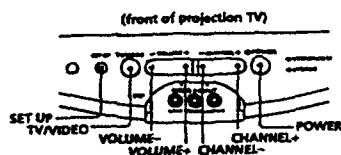


- 1 Press POWER to turn the projection TV on.



- 2 Press SET UP on the front of the projection TV.

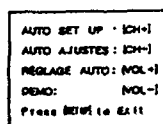


- 3 Press CHANNEL+ to start AUTO SET UP. If you prefer Spanish or French to English, you can change the on-screen menu language. Press CHANNEL- for Spanish or VOLUME+ for French.

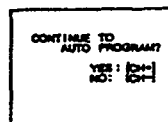


All of the menus will be set to the factory preset condition in the selected language.

 - 4 Press CHANNEL+ to preset channels.





"AUTO PROGRAM" appears on the screen and the TV starts scanning and presetting channels automatically. When all the receivable channels are stored, "AUTO PROGRAM" disappears and the following menu appears. If the projection TV receives cable TV channels, CATV is set to ON automatically.

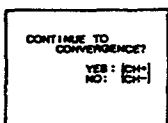


- 5 Adjust convergence.

- (1) Press CHANNEL+.

 
The CONVERGENCE adjustment screen appears.

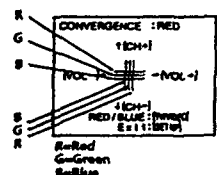

- (2) Press TV/VIDEO to select RED or BLUE.

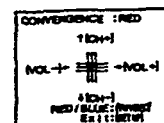


- (3) Using CHANNEL+/- or VOLUME+/-, move the line until it converges with the center green line.

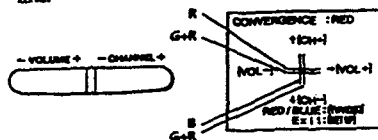

To move horizontal line up/down, press CHANNEL+/-.  
To move vertical line right/left, press VOLUME+/-.

- (4) Repeat steps (2) and (3) to adjust the other lines until all three lines converge and are seen as a white cross.

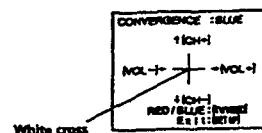

White cross

### Notes


- If more than 90 seconds elapse after you press a button, the menu disappears automatically.
- In case of using the AUX connector, press the TV button on the remote commander first and make sure that "AUX" is displayed beside the channel number on the screen. Then follow steps 2 to 5 above to perform AUTO SET UP (KP-41T25 only).

### To preview the main functions (DEMO)


Press VOLUME- in step 3. The functions and menus are displayed one by one.

## Erasing or adding channels



After AUTO SET UP you can erase unnecessary channels or add the channels you want. Preset channels during the day rather than late at night, when some channels may not be broadcasting.

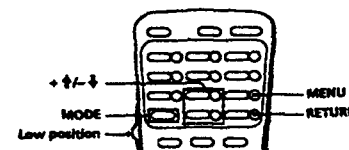

- 1 Press MENU. The main menu appears.

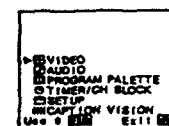


 - 2 Press +↑ or -↓ to move the cursor (▸) to SET UP and press RETURN. The SET UP menu appears.

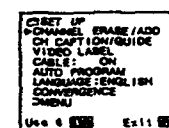

- 3 Make sure the cursor (▸) is beside CHANNEL ERASE/ADD and press RETURN.

If the cursor is not beside CHANNEL ERASE/ADD, press +↑ or -↓ to move the cursor and press RETURN. The CHANNEL ERASE/ADD menu appears.

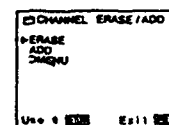


(continued)

#### 4 Erase and/or add the channel you want:

To erase an unwanted channel:

- (1) Make sure the cursor (P) is beside ERASE.
- (2) Press CH + or - to select the channel you want to erase.

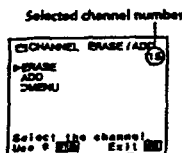



#### (3) Press RETURN.

The indication "-" appears beside the channel number, showing that the channel is erased from the preset memory.



To add a channel that you want

 - (1) Press + or - to select ADD.
- (2) Press 0-9 button to select the channel you want to add and press ENTER.

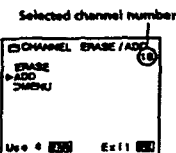

#### (3) Press RETURN.

The indication "+" appears beside the channel number, showing that the channel is added to the preset memory.



#### 5 To erase and/or add other channels, repeat step 4.

#### 6 When you finish, press MENU.



#### Notes

- If you erase or add a VHF or UHF channel, the cable TV channel with the same number is also erased or added, and vice versa.
- If more than 90 seconds elapse after you press a button, the menu disappears automatically.
- Erasing and adding channels are also available for the AUX input (KP-41T25 only).

### Adjusting convergence (CONVERGENCE)


The projection tube image appears on the screen in three layers (red, green and blue). If they do not converge, the color is poor and the picture blurs. To correct this, adjust convergence. You do not have to do this procedure if you execute AUTO SET UP (page 18). Do this procedure only when you want to adjust it manually.

#### 1 Press MENU.


#### 2 Press + or - to move the cursor (P) to SET UP and press RETURN.

#### 3 Press + or - to move the cursor (P) to CONVERGENCE and press RETURN.

The CONVERGENCE adjustment screen appears.

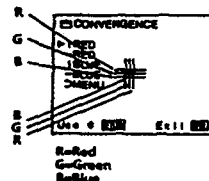


#### 4 Press + or - to move the cursor (P) to the symbol showing the line you want to adjust, and press RETURN.

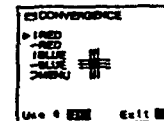

- RED: Red vertical line (left/right adjustment)
- RED: Red horizontal line (up/down adjustment)
- BLUE: Blue vertical line (left/right adjustment)
- BLUE: Blue horizontal line (up/down adjustment)

#### 5 Press + or - to move the line until it converges with the center green line, and press RETURN.

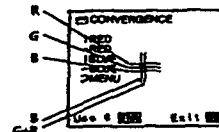

To move up/right, press +.

To move down/left, press -.

#### 6 Repeat steps 4 and 5 to adjust other lines until all three lines converge and are seen as a white cross.

#### 7 Press MENU to return to the original screen.

### Setting cable TV on or off


If you have connected the projection TV to a cable TV system, set CABLE to ON, the factory setting. If not, set CABLE to OFF.

You do not have to do this procedure if you execute AUTO SET UP (page 18). Do this procedure only when you want to set it manually.


#### 1 Press MENU.

#### 2 Press + or - to move the cursor (P) to SET UP and press RETURN.

#### 3 Press + or - to move the cursor (P) to CABLE and press RETURN.

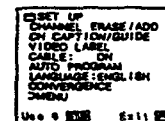

#### 4 Press + or - to select ON or OFF and press RETURN.

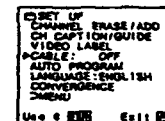

#### 5 Press MENU to return to the original screen.

#### Note


- If CABLE appears in black, the projection TV is set to a video input and you cannot select CABLE. Press TV on the remote commander so that a channel number appears.

(continued)

## Presetting channels

You can preset TV channels easily by AUTO PROGRAM feature.  
You do not have to do this procedure if you execute AUTO SET UP (page 18). Do this procedure only when you want to set it manually.

- 1 Press MENU.
- 2 Press + ↑ or - ↓ to move the cursor (▸) to SET UP and press RETURN.

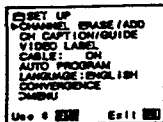

- 3 Press + ↑ or - ↓ to move the cursor (▸) to AUTO PROGRAM and press RETURN.



"AUTO PROGRAM" appears on the screen and the projection TV starts scanning and presetting channels automatically. When all the receivable channels are stored, "AUTO PROGRAM" disappears and the lowest numbered channel is displayed.

- 4 Press MENU to return to the original screen.


### Notes

- If AUTO PROGRAM appears in black in the SET UP menu, the projection TV is set to a video input and you cannot select AUTO PROGRAM. Press TV/VIDEO or TV on the remote commander so that a channel number appears.
- If more than 90 seconds elapse after you press a button, the menu disappears automatically.
- Presetting channels is also available for the AUX input. (KP-41T25 only)


## Changing the menu language

If you prefer Spanish or French to English, you can change the menu language.  
You do not have to do this procedure if you execute AUTO SET UP (page 18). Do this procedure only when you want to set it manually.

- 1 Press MENU.
- 2 Press + ↑ or - ↓ to move the cursor (▸) to SET UP and press RETURN.
- 3 Press + ↑ or - ↓ to move the cursor (▸) to LANGUAGE and press RETURN.

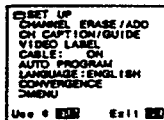

- 4 Press + ↑ or - ↓ to select the language and press RETURN.  
The menu in selected language appears.

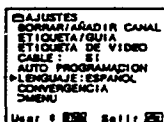

- 5 Press MENU to return to the original screen.


### Note

- Even when you select Spanish or French language, certain parts of the menus remain in English.

## Operations

### Watching TV programs

Check that the CABLE BOX/TV selector is set to TV.

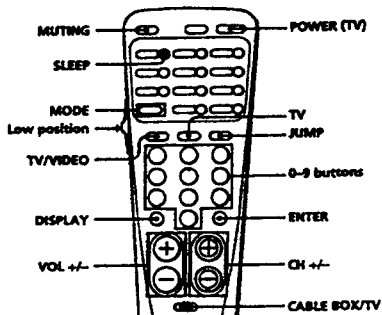


- 1 Press POWER (TV) to turn on the projection TV.  
The TIMER/STAND BY indicator flashes until the picture appears.



If "VIDEO" appears on the screen, press the TV/VIDEO or TV button so that a channel number appears.

- 2 Select the channel you want to watch:  
**To select a channel directly**  
Press the 0-9 buttons and then press ENTER.  
For example, to select channel 10, press 1, 0 and ENTER.

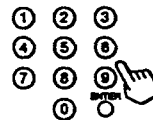


### To scan through channels

Press CH +/- until the channel you want to watch appears.



- 3 Press VOL +/- to adjust the volume.

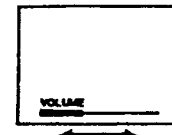

## Switching quickly between two channels

Press JUMP.

The channel you previously selected with the 0-9 buttons appears.



Pressing JUMP again switches back the channel.

## Muting the sound

Press MUTING.

"MUTING" appears on the screen.



To restore the sound, press MUTING again, or press VOL +.

## Displaying on-screen information

Press DISPLAY repeatedly until the desired display appears.

Each time you press DISPLAY, the display changes as follows:

Status display\* → XDS\*\* → Caption Vision\*\*\*

← DISPLAY OFF ←



- \* Channel number, the current time, channel caption (if set), and MTS mode (if SAP is selected) are displayed. SAP indication disappears after three seconds.

- \*\* Some programs are broadcast with XDS (Extended Data Service) which shows a network name, program name, program type, program length, call letters, and time of the show. When you select XDS with the DISPLAY button, this information will be displayed on the screen if the broadcaster offers this service.

(continued)

Some programs are broadcast with Caption Vision. When you select Caption Vision with the DISPLAY button, Caption Vision will be displayed on the screen if the broadcaster offers this service. (See page 38 for selecting Caption Vision.)

To cancel the display, press DISPLAY repeatedly until "DISPLAY OFF" appears. "DISPLAY OFF" goes off after three seconds.

## Setting the Sleep Timer

The projection TV stays on for the length of time you specify and then shuts off automatically.

Press SLEEP repeatedly until the time (in minutes) you want appears. Each time you press SLEEP, the time changes as follows: 30 → 60 → 90 → OFF.



"SLEEP" appears about one minute before the projection TV shuts off.

To cancel the Sleep Timer, press SLEEP repeatedly until "SLEEP OFF" appears, or turn off the projection TV.

The sleep timer is also cancelled when you select AUTO PROGRAM under the SET UP menu.

## Watching a video input picture

Press TV/VIDEO repeatedly until the desired video input appears. Each time you press TV/VIDEO, the display changes as follows: TV → VIDEO 1 → VIDEO 2 → VIDEO 3.



To return to TV picture, press TV.

## Changing the VHF/UHF input to the AUX input (KP-41T25 only)

Press TV. "AUX" appears beside the channel number.




Pressing TV again switches back to the previous input.

## Watching two programs at one time — PIP

The Picture-in-Picture (PIP) feature allows you to watch both the main picture and a window picture simultaneously.


For KP-46S17/53S17, your projection TV must be connected to a VCR to watch two TV channels at one time. See "Connecting an antenna/cable TV system with a VCR" (pages 7 to 10) for connections.

For KP-41T25, the Picture-in-Picture (PIP) feature allows you to watch two TV channels at one time.

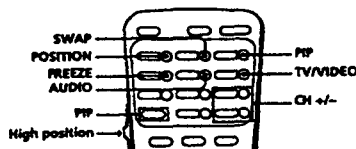


### Displaying a window picture

Press PIP.

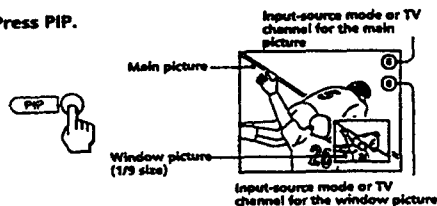

Press PIP again to display a smaller window picture.

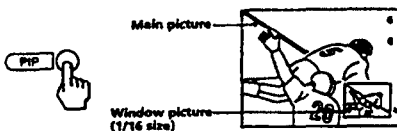

Each time you press PIP, the size of the window picture changes as follows: 1/9 size → 1/16 size → OFF.

To remove the window picture, press PIP repeatedly until the window picture disappears.

### Notes

- If the main picture is not receiving an image, the window picture may be in black and white.
- The window picture sound is also output from the AUDIO (VAR/FDO OUT) jacks when you listen to it.

### Changing the window picture input mode

Press TV/VIDEO in the PIP control area of the remote commander to select the input mode. Each time you press TV/VIDEO, "TV," "VIDEO 1," "VIDEO 2" and "VIDEO 3" appear in sequence.



### Note

- If you connect your VCR without a cable box, your PIP input source is a VCR. If you connect your VCR with a cable box, your PIP input source is a VCR or cable box.

### Changing TV channels in the window picture

Press CH +/- in the PIP control area.



### Listening to the sound of the window picture

Press AUDIO.

"A" appears for a few seconds, indicating that the window picture sound is being received.



To restore the main picture sound, press AUDIO again.

### Changing the position of the window picture

Press POSITION.

Each time you press POSITION, the window picture will move as illustrated.



### Freezing the window picture

This feature is useful when you want to write down a recipe from a cooking program, a displayed address or a phone number and so on.

Press FREEZE.




To restore the normal screen, press FREEZE again.

### Swapping the main and window pictures

Press SWAP.

Each time you press SWAP, the images and sound from the main and window pictures switch places with another.

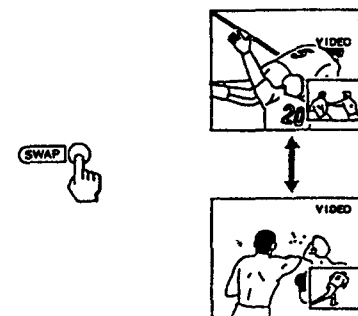


Note (KP-41T25 only)

- The channels being received through the AUX jack cannot be displayed as a window picture.

## Selecting picture and sound effects (PROGRAM PALETTE)

You can select one of three settings for picture and sound effects that best suits the program.  
You can also adjust picture effect for each setting to suit your taste.

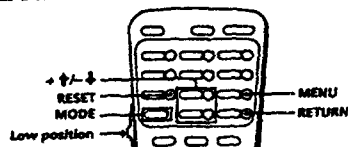

- 1 Press MENU.
- 2 Press +↑ or -↓ to select PROGRAM PALETTE and press RETURN.



- 3 Select the item you want to adjust.  
For example:  
(1) To select MOVIE, press +↑ or -↓ to move the cursor to MOVIE.



- (2) Press RETURN.



For details on each item, see "Effect of three items" in the right column.

### Effect of three items


Item	Picture effect	Sound effect
STANDARD	Standard	Standard
MOVIE	Finely detailed picture	Theatrical audio effect
SPORTS	Vivid, bright picture	Sound with a sports stadium effect

### Adjusting the picture in PROGRAM PALETTE

- 1 Press MENU.
- 2 Press +↑ or -↓ to select VIDEO and press RETURN.



- 3 Press +↑ or -↓ to select MODE and press RETURN.

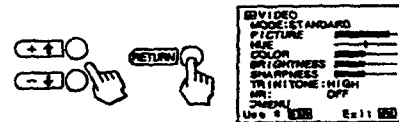

- 4 Press +↑ or -↓ to select the item which you want to adjust and press RETURN.




- 5 Adjust the picture according to the steps 3 to 5 in "Adjusting the picture" on page 27.


To restore the factory setting  
Press RESET while the VIDEO menu is displayed.

## Adjusting the picture (VIDEO)

When watching TV programs, you can adjust the quality of the picture to suit your taste. The adjusted level is stored in PROGRAM PALETTE in which that adjustment is done. You can adjust the picture of video input(s) as well.

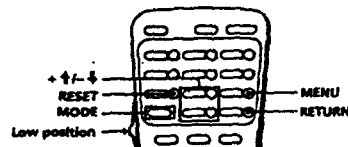

- 1 Press MENU.
- 2 Press +↑ or -↓ to move the cursor to VIDEO and press RETURN.  
The VIDEO adjustment menu appears.

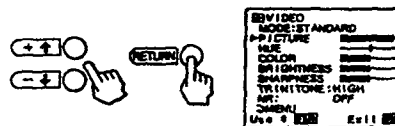

- 3 Select the item you want to adjust.  
For example:  
(1) To adjust brightness, press +↑ or -↓ to select BRIGHTNESS.



- (2) Press RETURN.



- 4 Adjust the selected item:  
(1) Press +↑ or -↓ to adjust the item.



- (2) Press RETURN.  
The new setting appears in the VIDEO menu, and is stored in the displayed PROGRAM PALETTE mode.



For details on each item, see "Description of adjustable items" below.

- 5 To adjust other items, repeat steps 3 and 4.


### Description of adjustable items.

Item	Press +↑ to	Press -↓ to
PICTURE	Increase picture contrast for vivid color	Decrease picture contrast for soft color
HUE	Make overall picture greenish	Make overall picture purplish
COLOR	Increase color intensity	Decrease color intensity
BRIGHTNESS	Brighten the picture	Darken the picture
SHARPNESS	Sharpen the picture	Soften the picture


To restore the factory setting  
Press RESET on the remote commander.

## Adjusting the color temperature (TRINITONE)

The TRINITONE feature controls the color temperature, permitting white balance preference adjustment without affecting skin tones.

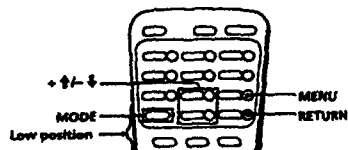

- 1 Press MENU.
- 2 Press + ↑ or - ↓ to select VIDEO and press RETURN.
- 3 Press + ↑ or - ↓ to select TRINITONE and press RETURN.

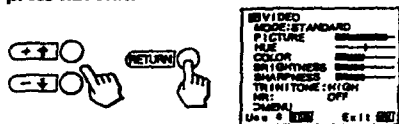


- 4 Press + ↑ or - ↓ to select NTSC STD, MEDIUM or HIGH and press RETURN.



Choose	To
NTSC STD	Make the white color reddish.
MEDIUM	Make the white color whitish.
HIGH	Make the white color bluish.

## Reducing picture noise (NR)


You can reduce picture noise when NR is set to ON.

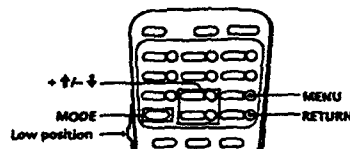

- 1 Press MENU.
- 2 Press + ↑ or - ↓ to select VIDEO and press RETURN.
- 3 Press + ↑ or - ↓ to select NR and press RETURN.



- 4 Press + ↑ or - ↓ to select ON and press RETURN.

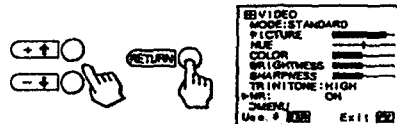


### Note

• This feature is useful when watching a weak broadcast signal.

## Adjusting sound (AUDIO)

You can adjust the quality of the TV sound to suit your taste. \*You can adjust the sound of video input(s) as well.

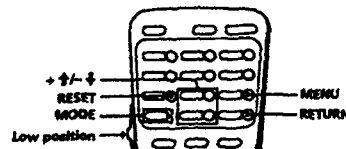

- 1 Press MENU.
- 2 Press + ↑ or - ↓ to select AUDIO and press RETURN.



- 3 Select the item you want to adjust.

For example:


- (1) To adjust bass, press + ↑ or - ↓ to select BASS.




- (2) Press RETURN.



- 4 Adjust the selected item:  
(1) Press + ↑ or - ↓ to adjust the item.

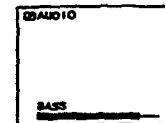

- (2) Press RETURN.  
The new setting appears in the AUDIO menu.

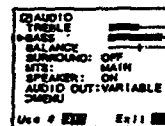

For details on each item, see "Description of adjustable items" below.

- 5 To adjust other items, repeat steps 3 and 4 above.


### Description of adjustable items

Item	Press + ↑ to	Press - ↓ to
TREBLE	Increase the treble response	Decrease the treble response
BASS	Increase the bass response	Decrease the bass response
BALANCE	Emphasize the right speaker's volume	Emphasize the left speaker's volume


To restore the factory settings  
Press RESET on the remote commander.

## Listening to surround sound (SURROUND)


The SURROUND feature simulates sound reproduction with the atmosphere of a movie theater or a concert hall. Surround sound is only effective for stereo programs (stereo light indication on).

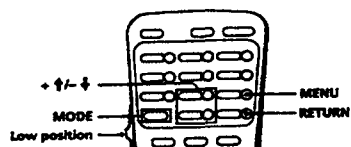

- 1 Press MENU.
- 2 Press + ↑ or - ↓ to select AUDIO and press RETURN.
- 3 Press + ↑ or - ↓ to select SURROUND and press RETURN.

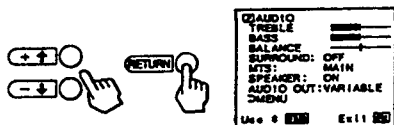


- 4 Press + ↑ or - ↓ to select ON and press RETURN.

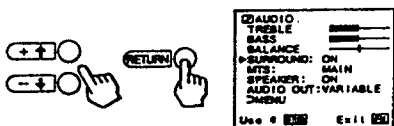


## Selecting stereo or bilingual programs (MTS)


The Multichannel TV Sound (MTS) feature gives you the choice to enjoy stereo sound or Second Audio Programs (SAP) when available. The initial setting is stereo sound (MAIN).

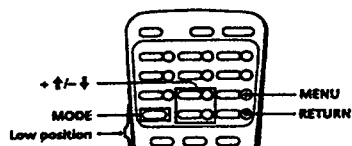

- 1 Press MENU.
- 2 Press + ↑ or - ↓ to select AUDIO and press RETURN.
- 3 Press + ↑ or - ↓ to select MTS and press RETURN.

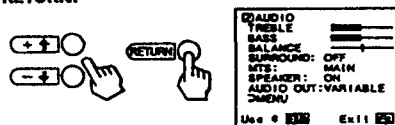

- 4 Press + ↑ or - ↓ to select MAIN, SAP or MONO and press RETURN.

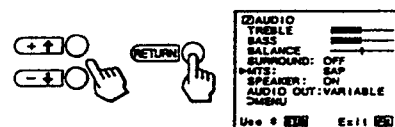


Choose	To
MAIN	Listen to stereo sound. The STEREO indicator on the projection TV lights up while a stereo broadcast is received.
SAP	Listen to bilingual programs. The sound of non-SAP programs will be muted when SAP is selected.
MONO	Reduce noise during stereo broadcasts.

### Note


- Stereo and SAP sounds are subject to program sources.

## Setting the speaker switch (SPEAKER)


You may switch off the projection TV speakers when, for example, you want to listen to the sound through a stereo system.

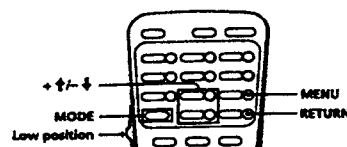

- 1 Press MENU.
- 2 Press + ↑ or - ↓ to select AUDIO and press RETURN.
- 3 Press + ↑ or - ↓ to select SPEAKER and press RETURN.

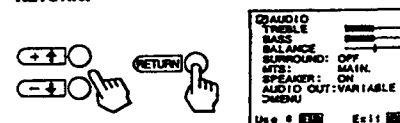


- 4 Press + ↑ or - ↓ to select OFF and press RETURN.

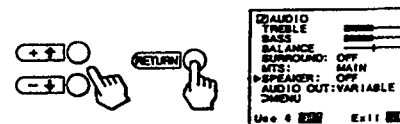


## Setting audio out (AUDIO OUT)


You can select audio out to variable or fixed when SPEAKER is set to OFF. Audio out is variable when SPEAKER is set to ON.

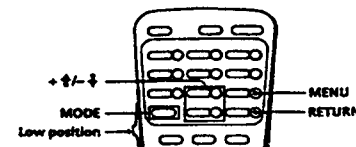

- 1 Press MENU.
- 2 Press + ↑ or - ↓ to select AUDIO and press RETURN.
- 3 Press + ↑ or - ↓ to select AUDIO OUT and press RETURN.

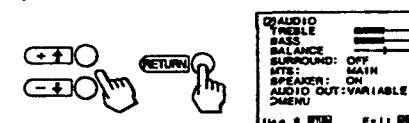

- 4 Press + ↑ or - ↓ to select VARIABLE or FIXED and press RETURN.

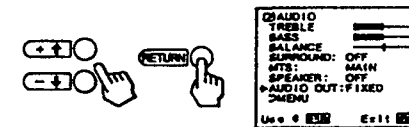

- VARIABLE:** Sound output varied according to the projection TV settings. You can adjust the volume, bass, treble and balance.
- FIXED:** Sound output is always fixed to a certain level. You cannot adjust the volume.

## Setting daylight saving time (DAYLIGHT SAVING)


If your area uses daylight saving time, change DAYLIGHT SAVING setting depending on the season, before setting the current time.

### Daylight saving start

- After the first Sunday in April, set DAYLIGHT SAVING to YES. Current time setting (page 33) automatically moves one hour ahead.


### Daylight saving end

- After the last Sunday in October, set DAYLIGHT SAVING to NO. Current time setting automatically moves one hour back.

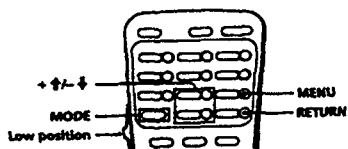

1 Press MENU.


2 Press + ↑ or - ↓ to move the cursor (▶) to TIMER/CH BLOCK and press RETURN.

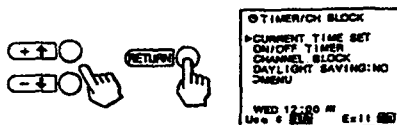

3 Press + ↑ or - ↓ to select DAYLIGHT SAVING and press RETURN.




4 Press + ↑ or - ↓ to select YES or NO and press RETURN.

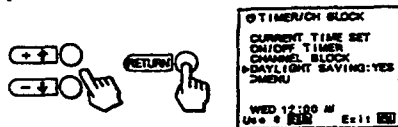

Choose	To
YES	Set for daylight saving start
NO	Set for daylight saving end


## Setting the clock (CURRENT TIME SET)

Set the current time before using On/off Timer (page 34) and Channel Block features (page 35). For example, set the clock to 3:15 p.m., Monday.

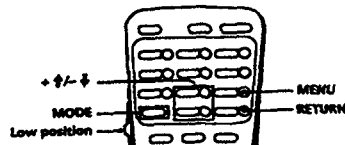


1 Press MENU.

2 Press + ↑ or - ↓ to select TIMER/CH BLOCK and press RETURN.

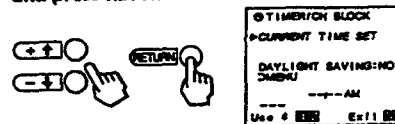

If you need to set DAYLIGHT SAVING, follow the procedure on the previous page.

3 Make sure the cursor (▶) is beside CURRENT TIME SET, and press RETURN. If the cursor is not beside CURRENT TIME SET, press + ↑ or - ↓ to move the cursor and press RETURN.

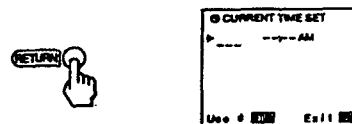


4 Set the current time.


(1) Press RETURN to start setting the time.



(2) Press + ↑ or - ↓ to set the day and press RETURN.

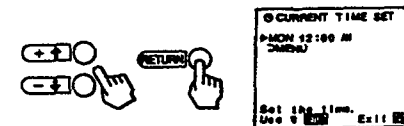

(3) Using + ↑ or - ↓ and RETURN, set hour and minute in the same way as in step (2). When you press RETURN after setting the minute, the clock starts.

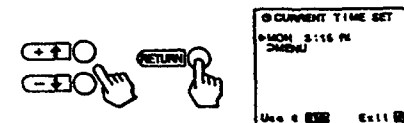

If you make a mistake while setting the time Press RESET while the CURRENT TIME SET menu is displayed, then repeat step 4.

To display the current time Press DISPLAY.


### Note

- If you unplug the projection TV or a power interruption occurs, the clock will be erased. Reset the current time.




## Setting the timer to turn the projection TV on and off (ON/OFF TIMER)

You can set the projection TV to turn on and off at the time you specify. Make sure the clock is set correctly. If it is not, set the clock first.

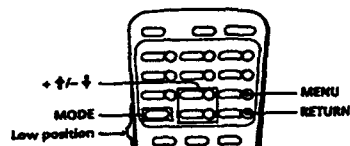


- 1 Press MENU.
- 2 Press + ↑ or - ↓ to select TIMER/CH BLOCK and press RETURN.
- 3 Press + ↑ or - ↓ to select ON/OFF TIMER and press RETURN.

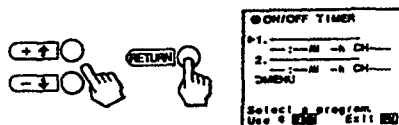


- 4 Enter the ON/OFF TIMER setting.

(1) Press + ↑ or - ↓ to select program 1 or 2 and press RETURN.


(2) Press + ↑ or - ↓ to set the days and press RETURN. Each time you press + ↑ or - ↓, the days cycle as shown below.  
 EVERY SUN-SAT → EVERY MON-FRI → SUNDAY → MONDAY → ... → SATURDAY → EVERY SUNDAY → EVERY MONDAY → ... → EVERY SATURDAY

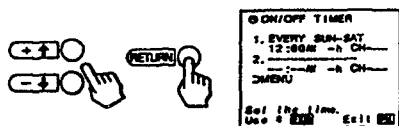


(3) Press + ↑ or - ↓ to set the time (hour then minute) that you want to turn on the projection TV and press RETURN.

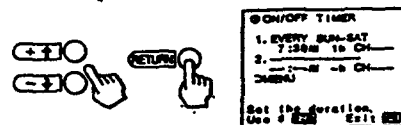

(4) Press + ↑ or - ↓ to set the hour duration and press RETURN.  
 You can set the hour duration by one hour up to a maximum of six hours.

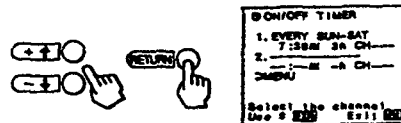

(5) Press + ↑ or - ↓ to select the channel and press RETURN.

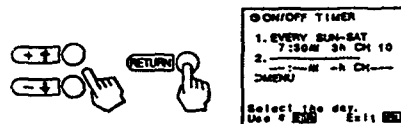

The TIMER/STAND BY indicator on the projection TV lights.

- 5 To set the other program, press RETURN and repeat step 4.

One minute before the projection TV switches to turn off, a message "TV will turn off." is displayed on the screen.


To cancel the timer  
 Press RESET on the remote commander.

### Note


- If you unplug the projection TV or a power interruption occurs, ON/OFF TIMER settings will be erased. Reset the current time, then set the timer.

## Blocking out a channel (CHANNEL BLOCK)

This feature allows you to prevent children from watching unsuitable programs.  
 Make sure the clock is set correctly. If it is not, set the clock first (page 33).

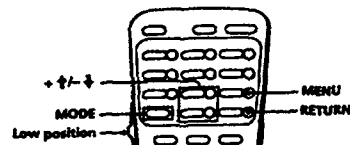


- 1 Press MENU.
- 2 Press + ↑ or - ↓ to select TIMER/CH BLOCK and press RETURN.
- 3 Press + ↑ or - ↓ to select CHANNEL BLOCK and press RETURN.

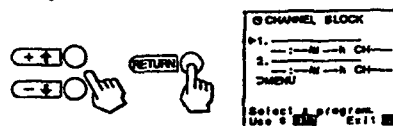


- 4 Enter a CHANNEL BLOCK setting.

(1) Press + ↑ or - ↓ to select program 1 or 2 and press RETURN.


(2) Press + ↑ or - ↓ to set the days and press RETURN. Each time you press + ↑ or - ↓, the days cycle as shown below.  
 EVERY SUN-SAT → EVERY MON-FRI → SUNDAY → MONDAY → ... → SATURDAY → EVERY SUNDAY → EVERY MONDAY → ... → EVERY SATURDAY

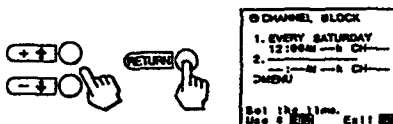


(3) Press + ↑ or - ↓ to set the time (hour then minute) that you want to start blocking the channel and press RETURN.

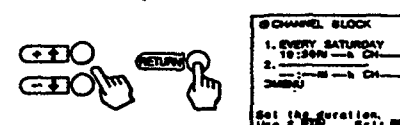

(4) Press + ↑ or - ↓ to select the hour duration you want to block and press RETURN.  
 Each time you press RETURN, the hour duration increases by one hour up to a maximum of 12 hours.

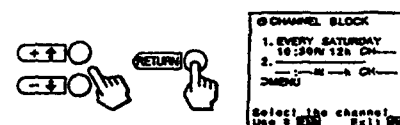

(5) Press + ↑ or - ↓ to select the channel and press RETURN.

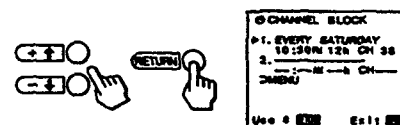

If you select the blocked channel during the time you set, the message "BLOCKED" appears and the picture is blocked and the sound is muted.

To cancel a CHANNEL BLOCK setting  
 Press RESET on the remote commander.


### Note

- If the CHANNEL BLOCK and ON/OFF TIMER settings are overlapped, the later time setting has priority over the other setting.


## Customizing the channel number buttons (CH CAPTION/GUIDE)

You can choose up to 12 channels, caption each channel, and assign a specific channel number button to each channel. This feature allows you to select your favorite channels easily by name. For example, you can name channel 20 "ESPN," and assign the channel number 4 button to it.


### Setting captions to favorite channels

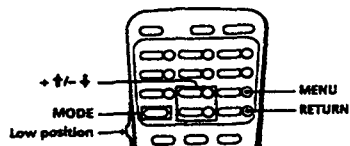


- 1 Press MENU.
- 2 Press + ↑ or - ↓ to select SET UP and press RETURN.
- 3 Press + ↑ or - ↓ to select CH CAPTION/GUIDE and press RETURN.

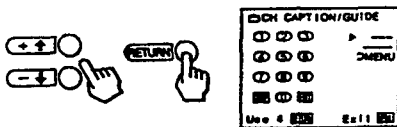


- 4 Press RETURN again.

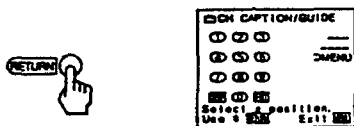

- 5 Press + ↑ or - ↓ to select a channel guide number button and press RETURN. Each time you press + ↑ or - ↓, the channel positions change to red in turns. The channel number button you select will be the one you press to call up your favorite channel.

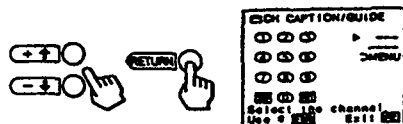

- 6 Press + ↑ or - ↓ to select the channel that you want to caption and press RETURN.

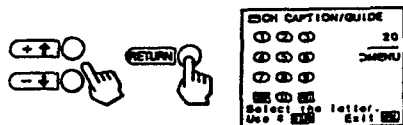


- 7 Enter the letters or numbers (up to four) to caption the channel:

(1) Press + ↑ or - ↓ to select the first letter (number). Each time you press + ↑ or - ↓, the letter (number) changes as shown below.


0→1→2→3→4→5→6→7→8→9→A→B→C→D→E→F→G→H→I→J→K→L→M→N→O→P→Q→R→S→T→U→V→W→X→Y→Z→[blank space]



- (2) Press RETURN.

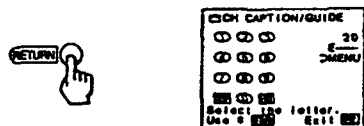

- (3) Repeat steps (1) and (2) to select the remaining letters (numbers) and press RETURN.

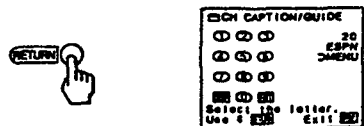


- 8 Repeat steps 4 to 7 to caption other channels.

To erase a caption  
Press RESET after step 4.


#### Notes

- The position number you already selected appears in yellow.
- If the CH CAPTION/GUIDE menu appears in black, the projection TV is set to a video input, and you cannot select CH CAPTION/GUIDE. Press TV so that a channel number appears.
- If more than 90 seconds elapse after you press a button, the menu disappears automatically.
- The channel caption feature is not available for the AUX input (KP-41725 only).

### Selecting a captioned channel

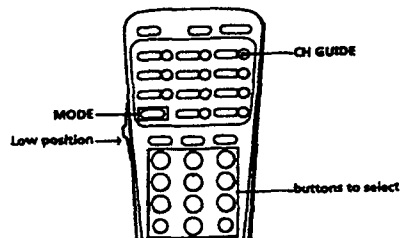

- 1 Press CH GUIDE. The CHANNEL GUIDE menu appears showing channel captions and the corresponding channel number buttons.

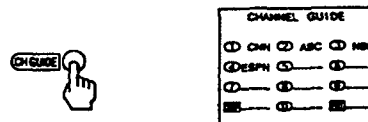


- 2 Press a channel number button, the DISPLAY or ENTER button to select the channel you want.


To cancel the CHANNEL GUIDE menu  
Press CH GUIDE again.

## Setting video labels (VIDEO LABEL)


This feature allows you to label each input mode so that you can easily identify the connected equipment. For example, you can label VIDEO 1 IN as VHS.

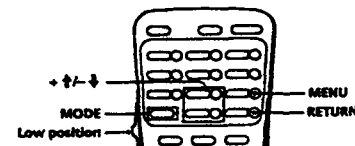

- 1 Press MENU.
- 2 Press + ↑ or - ↓ to select SET UP and press RETURN.
- 3 Press + ↑ or - ↓ to select VIDEO LABEL and press RETURN.

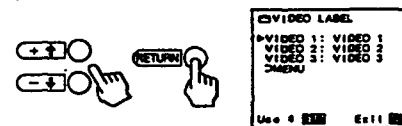


- 4 Press + ↑ or - ↓ to select the input mode you want to label and press RETURN.

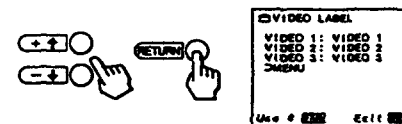

(continued)

- 5 Press + ↑ or - ↓ to select the label and press RETURN.

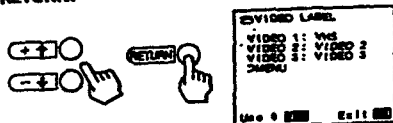

Each time you press + ↑ or - ↓, the label changes as shown below.

VIDEO 1  
VIDEO 1 → S-VIDEO → BETA → 8mm → VHS → LD → DBS

VIDEO 2  
VIDEO 2 → BETA → 8mm → VHS → LD → DBS

VIDEO 3  
VIDEO 3 → BETA → 8mm → VHS → LD → DBS

- 6 Repeat steps 4 and 5 to label other input modes.

#### Note


- If more than 90 seconds elapse after you press a button, the menu disappears automatically.

## Displaying Caption Vision (CAPTION VISION/ XDS)

Some programs are broadcast with Caption Vision. To display Caption Vision, select either CC1, CC2, CC3, CC4, TEXT1, TEXT2, TEXT3 or TEXT4 from the menu. CC1, CC2, CC3 or CC4 shows you a caption, that is a printed version of the dialog or sound effects of a program. (The mode should be set to CC1 for most programs.) TEXT1, TEXT2, TEXT3 or TEXT4 shows you text, that is information presented using either half or the whole screen. It is not usually related to the program.


- 1 Press MENU.

- 2 Press + ↑ or - ↓ to select CAPTION VISION/ XDS and press RETURN.

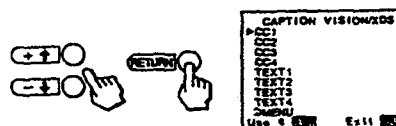

- 3 Press + ↑ or - ↓ to select the caption type and press RETURN.

The selected caption type is colored green.

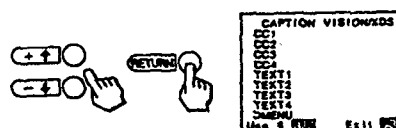

To turn off the captions or text Press DISPLAY on the remote commander.

Each time you press DISPLAY, the display changes as follows:

on-screen information → XDS → Caption Vision or Text  
DISPLAY OFF

"DISPLAY OFF" goes off after three seconds.

\* Some programs are broadcast with XDS service which shows a network name, program name, program length, call letters and time of the show. When you select XDS with the DISPLAY button, this information will be displayed on the screen if the broadcaster offers this service.


#### Note

- Captions may appear with a white box or another error instead of a certain word. Poor reception of TV programs can also cause errors in Closed Caption.

## Operating video equipment

You can operate a piece of video equipment that has an infrared remote sensor with the supplied remote commander. Before operating, set the manufacturer's code number.

### Setting the manufacturer's code

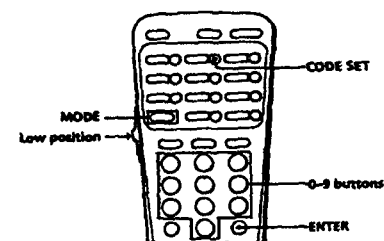

While holding down CODE SET, press 0 - 9 to enter the manufacturer's code number (see the chart on page 35) and press ENTER. For example, to operate a Sony 8 mm VCR, press 0, 2 and ENTER.



(continued)

## Manufacturer code numbers

Manufacturer	Code number
SONY	01, 02, 03
CANON	05
EMERSON	22, 30, 33
FISHER	10, 11, 12, 15
FUNAI	29
GENERAL ELECTRIC	05, 08
GOLDSTAR	25
HITACHI	07, 08, 36
JVC	16, 35
MAGNAVOX	05, 06, 09
MITSUBISHI	18, 19, 26, 27
MULTITECH	29
NEC	16, 23, 31
PANASONIC	05, 06, 37
PHILCO	05, 06
PHILIPS	05, 06, 09
QUASAR	05, 06
RCA	07, 08
SAMSUNG	24, 32
SANYO	11, 15
SCOTT	21
SHARP	13, 14
SHINTOM	34
SYLVANIA	05, 06, 09
SYMPHONIC	29
TEKNIKA	28, 29
TOSHIBA	20, 21
TOTE VISION	25
ZENITH	17

## MDP manufacturer code numbers

Manufacturer	Code number
SONY	04
KENWOOD	58
MAGNAVOX	52
MARANZ	54
MITSUBISHI	51
PANASONIC	55
PHILIPS	52
PIONEER	51
RCA	51
SANYO	57
SHARP	56
YAMAHA	53

### Notes


- If more than one code number is listed, try entering them one by one, until you come to the correct code for your equipment.
- In some rare cases, you may not be able to operate your non-Sony video equipment with this remote commander. This is because your equipment may use a code that is not provided with this remote commander. In this case, please use the equipment's own remote control unit.
- The code numbers for Sony equipment are assigned at the factory as follows:
 

Beta, ED Beta VCRs	01
8 mm VCR	02
VHS VCR	03 (preset code for this remote commander)

### Caution

When you remove a battery from the remote commander, the code may revert to 03. Reset the codes each time you replace the battery, if necessary.

## Operating video equipment

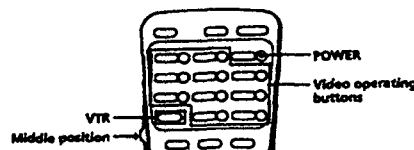

Use the video operating buttons on the remote commander to operate the video equipment.

Operating a VCR	Buttons on the remote commander
To turn on or off	Press POWER
To change channels	Press CH +/-
To record	Press ● and REC simultaneously
To play	Press ►
To stop	Press ■
To fast forward	Press ►►
To rewind the tape	Press ◄◄
To pause	Press II
To search the picture forward and backward	Press ►► or ◄◄ during playback


Operating a laser-disc player	Buttons on the remote commander
To play	Press ►
To stop	Press ■
To pause	Press II
To search the picture forward and backward	To resume normal playback, press again. Keep pressing ►► or ◄◄ during playback To resume normal playback, release the button.
To search the chapter forward and backward	Press CH +/-

### Note

- If the video equipment does not have a certain function, the corresponding button on this remote commander will not operate.

## Operating a cable box

You can operate a connected cable box with the supplied remote commander. Before operating, set the manufacturer's code number.

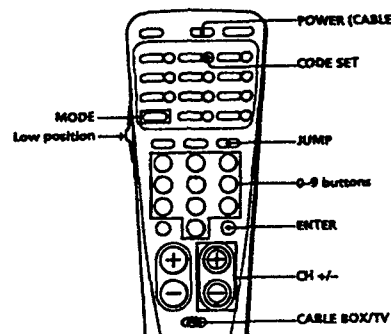


1 Set the CABLE BOX/TV selector to CABLE BOX.



2 While holding down CODE SET, press 0 - 9 to enter the manufacturer's code number (see the chart in the right column) and press ENTER. For example, to operate a Zenith cable box, press 6 and 8 and press ENTER.



3 Use POWER (CABLE) and the projection TV control buttons (0 - 9, ENTER, JUMP and CH +/-) to operate the cable box.

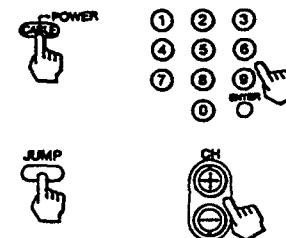

To operate the projection TV

Set the CABLE BOX/TV selector to TV. Then use the projection TV control buttons to control the projection TV.

For more details on operating the cable box Refer to the operating instructions that come with the cable box.

## Manufacturers and code numbers (cable box)

Manufacturer	Code number
JERROLD	60, 61, 62, 63, 64, 65, 73
PIONEER	69, 70
SCIENTIFIC ATLANTA	66, 67
TOCOM	71, 72
ZENITH	68

### Notes

- If more than one code number is listed, try entering them one by one until you come to the correct code for your equipment.
- If you enter a new code number, the code number you previously entered at that setting is erased.
- In some rare cases, your equipment may use a code that is not provided with this remote commander and you may not be able to operate your cable box with the supplied remote commander. In this case, use the equipment's own remote control unit.
- When you remove a battery from the remote commander, the code may be erased. Reset the code each time you replace the battery, if necessary.

# Troubleshooting

After trying the methods below, if the problem persists, contact your nearest Sony dealer.

## No picture (screen not lit), no sound

- Make sure the power cord is connected securely.
- Check to see if the TV/VIDEO setting is correct: when watching TV, set to TV, and when watching video tapes, set to VIDEO. (page 24)
- Make sure the CABLE BOX/TV selector is in the correct position. (page 23)
- Try another channel. It could be station trouble.

## Poor or no picture (screen lit), good sound

- Adjust PICTURE in the VIDEO menu. (page 27)
- Adjust BRIGHTNESS in the VIDEO menu. (page 27)
- Adjust the convergence. (page 20)
- Check antenna/cable connections. (page 6)

## Good picture, no sound

- Press MUTING so that "MUTING" disappears from the screen. (page 23)
- Check the MTS setting in the AUDIO menu. (page 30)
- Make sure SPEAKER is set to ON in the AUDIO menu. (page 31)

## No color

- Adjust COLOR in the VIDEO menu. (page 27)
- Confirm that black and white program is not being broadcast.

## Only snow and noise appear on the screen

- Check the CABLE setting in the SET UP menu. (page 21)
- Check the antenna/cable connections. (page 6)
- Make sure the channel is broadcasting programs.

## Dotted lines or stripes

- Adjust the antenna.
- Move the projection TV away from noise sources such as cars, neon signs, and hair-dryers.

## Double images or ghosts

- Use a highly directional outdoor antenna or a cable (when the problem is caused by reflections from nearby mountains or tall buildings.)

## Cannot operate menu

- If the item you want to choose appears in black, you cannot select it. Press TV/VIDEO correctly.
- Check the CABLE setting in the SET UP menu. (page 21)

## Cannot receive upper channels (UHF) when using an antenna

- Check if CABLE is OFF in the SET UP menu. (page 21)
- Use AUTO PROGRAM to add receivable channels that are not presently in the memory. (page 22)

## Cannot receive any channels when using cable TV

- Check if CABLE is ON in the SET UP menu. (page 21)
- Use AUTO PROGRAM to add receivable channels that are not presently in the memory. (page 22)

## Remote commander does not operate

- Battery could be weak. Replace the battery. (page 17)
- Make sure the projection TV's power cord is connected securely to wall outlet.
- Set the CABLE BOX/TV selector to TV when operating your projection TV.
- Are fluorescent lights too close to the projection TV? Move lights at least 3 - 4 feet away from the projection TV.

## Commander's power, channel up/down, channel buttons do not function

- Set the CABLE BOX/TV selector to the correct position. (page 41)

## Cannot gain enough volume when using a cable box

- Increase the volume at the cable box. Then set the CABLE BOX/TV selector to TV and adjust the projection TV's volume. (page 41)